

Auto Balancing Actuator
Model: THB23031
THB2431



Quick Guide

DE
support@salus-controls.de
tel: +49 6108 8258515

NL:
support@saluscontrols.nl
tel: +31 (0)85 7326848

FR:
technicalsupport@saluscontrols.fr
Tel: +33 134 724 039

WWW.Saluscontrols.com

SALUS Controls is a member of the Computime Group
Maintaining a policy of continuous product development SALUS Controls plc reserve the right to change specification, design and materials of products listed in this brochure without prior notice.



Issue date: Oct 2023
Version: V013



Introduction

The THB23031 / THB2431 is an auto balancing actuator that is used to provide automatic balancing of your underfloor heating circuits. It has two temperature sensors that are connected to the UFH flow & return pipes (inlet and outlet of the UFH manifold). It will continuously measure the temperatures and adjust the actuator position to maintain the correct temperature differential between the manifold flow and return pipes (ΔT). This product has an IP54 rating means that the product will be protected against contamination from limited amounts of dust and other particles. Additionally, it will be protected from water sprays from all directions.

iTG Dresden have confirmed that the Salus THB actuator is equivalent to the hydraulic balancing. In co-operation with iTG Dresden, the Salus THB actuator has been tested and improved. During independent testing it was confirmed that the installation of the Salus THB system in existing underfloor heating systems will achieve the same results as a conventional hydraulic balancing. It achieves this, however, with minimum set-up time compared to lengthy conventional balancing.


Product Compliance

This product complies with the EN60730-1/EN IEC 60730-2-14; EN61000-3-3; EN IEC 61000-3-2; 2014/30/EU; 2014/35/EU; RoHS 2015/863/EU Directive.


Safety Information

Use in accordance with the regulations. Designed to be used exclusively indoor. Keep your device completely dry. Disconnect your device before cleaning it with a dry towel. This accessory must be fitted by a competent person, and installation must comply with the guidance, standards and regulations applicable to the city, country or state where the product is installed. Failure to comply with the relevant standards could lead to prosecution.

Installation

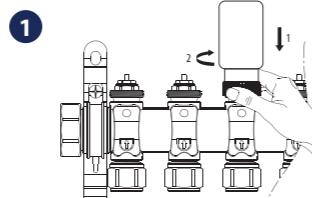

Attach the THB to underfloor heating manifold thermostatic valves, on the return bar. When installing the THB23031 / THB2431 ensure it is fully tightened onto the manifold. Actuator is in fully open position, out of the box, for easy installation.

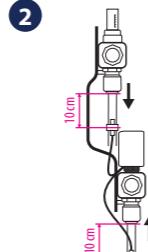


Attach the two pipe temperature sensors, one on the flow pipe and the other to the return pipe.

Ensure the actuator temperature pipe sensors are placed facing forward to the flow and return pipes 10 cm down from the manifold.

3 Connect the THB power cable to the control wiring centre or the thermostat. Please note, the THB23031 requires a 230V connection, and THB2431 requires a 24V power supply. Do not turn on the power just yet!

4 Fully open the flowmeters or shut-off valves on the supply manifold bar.

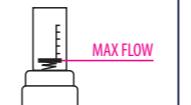

5 When connected to a thermostat set the demand to maximum in order to power the THB. This requires to be on for 10 min to fully charge the first load of the capacitor.

The LED will flash green for about 3 minutes while an adaptation process is ongoing. The LED will turn solid green to indicate the adaptation was successful. If failed, the LED will flash red.



Adaptation is ongoing



Adaptation successful



Failed adaptation

LED Indication



MCU firmware version
*E.g: MCU 2.1
LED - Flashing green 2 times and red 1 time*



Charging Capacitor (takes approx 2 minutes)
LED - Flashing green 1 tick/s



Wrong mounting
LED - Flashing red 2 times then OFF for 3 seconds, and then the sequence is repeated



Adaptation failure or THB was removed during adaptation
LED - Flashing red 2 ticks/s then OFF for 3 seconds, and then the sequence is repeated



Manual reset
LED - Solid red



Manual reset finished
LED - Flashing red 3 times then OFF for 3 seconds, and then the sequence is repeated



Temperature sensor failure
LED - Flashing red 4 ticks/s then OFF for 3 seconds, and then the sequence is repeated



Normal operation (Balancing) or Calibration Phase
LED - Solid green



Actuator closed
LED - OFF




Do not dismount the actuator while it is powered supplied (green LED on). Cut the power supply, then dismount it. Power on the actuator to set it fully open for easier installation.

Manual FACTORY RESET

This process provides a way to factory reset the actuator. Please follow the below phases to factory reset the actuator:

- i** If the actuator is OFF, please power ON for at least 2 min and then follow the steps below!
- 1 Turn OFF the power for 15s;
- 2 Turn ON the power for 15s;
- 3 Turn OFF the power for 15s;
- 4 Turn ON the power. The LED will turn solid RED to indicate enter the "Factory Reset Mode". The motor shaft it will completely open.
- 5 When the motor shaft will be completely opened, the LED will flash RED (*3 times then OFF for 3 seconds*) to indicate that the "Factory Reset" is complete.
- 6 To complete normal operation, turn OFF the power for 15s and then turn it ON. The LED will once again turn GREEN/RED to indicate the firmware version.

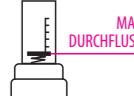

- 4 Stellen Sie die Durchflussmengenregler (Topmeter) auf maximalen Durchfluss.

- 5 Bei Anschluss an einen Thermostat stellen Sie den Bedarf auf Maximum, um den THB mit Strom zu versorgen. Dieser muss 10 Minuten lang eingeschaltet sein, um die erste Ladung des Kondensators vollständig aufzuladen. Während ein Anpassungsprozess läuft, blinkt die LED etwa 3 Minuten lang grün. Sobald die LED grün leuchtet war die Anpassung erfolgreich.



Anpassungsphase
Anpassung erfolgreich



Anpassungsfehler

LED Anzeige



MCU-Firmware-Version

Beispiel: MCU 2.1
LED - Blinkt 2 Mal grün und 1 Mal rot



Ladekondensator (dauert ca 2 Minuten)

LED - Grün blinkt 1/s




Falsche Montage

LED - Blinkt 2 Mal rot, dann AUS für 3 Sekunden, und dann wird die Sequenz wiederholt



Anpassungsfehler oder THB wurde während der Anpassung entfernt

LED - Rotes Blinken 2 Mal, dann AUS für 3 Sekunden, und dann wird die Sequenz wiederholt

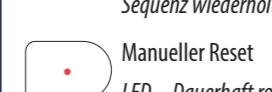

Manueller Reset

LED - Dauerhaft rot



Manuelles Zurücksetzen abgeschlossen


LED - Blinkt 3 Mal rot, dann AUS für 3 Sekunden, und dann wird die Sequenz wiederholt

- i Um in den Normalbetrieb zu kommen, Spannung wegnehmen und nach ca. 20 Sek wieder starten.



Ausfall des Temperatursensors

LED - Rotes Blinken 4 Mal, dann AUS für 3 Sekunden, und dann wird die Sequenz wiederholt

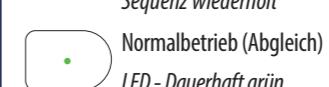

Normalbetrieb (Abgleich)

LED - Dauerhaft grün




Antrieb geschlossen

LED - AUS

- i Den Antrieb nicht im aktiven Zustand entfernen (grüne LED an) nur im Stromlosen Zustand demontieren. Den Antrieb dann voll bestromen damit dieser voll öffnet zum einfach montieren.

Montage

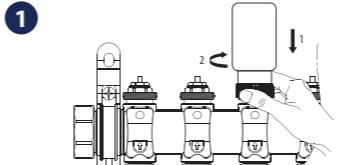

Montieren sie den THB auf das Ventil im Rücklauf. Stellen Sie sicher dass der THB fest auf dem Ventil sitzt. Der THB ist im Auslieferzustand stromlos offen, um eine einfache Montage zu gewährleisten.



Befestigen Sie die beiden Temperaturfühler an Vor- und Rücklauf. Stellen Sie sicher dass diese nach vorne zeigen und ca. 10 cm unterhalb des Verteilerbalkens angebracht sind, hierbei ist es unerheblich welche Klammer an welche Leitung angeklemmt wird.



Verbinden Sie nun die Stromversorgung des THBs. Bitte beachten Sie das der THB23031 230V benötigt und der THB2431 24V Stromversorgung (AC, 50Hz) benötigen.

Manueller Werkreset

Dieser Vorgang bietet eine Möglichkeit, den Steuerantrieb auf die Werkseinstellungen zurückzusetzen. Bitte folgen Sie die folgenden Schritte, um den Steuerantrieb auf die Werkseinstellungen zurückzusetzen:

- i** Wenn der Steuerantrieb ausgeschaltet ist, schalten Sie ihn bitte mindestens 2 Minuten lang ein und befolgen Sie dann die folgenden Schritte!
- 1 Schalten Sie den Strom für 15 Sekunden aus;
- 2 Schalten Sie die Stromversorgung für 15 Sekunden ein;
- 3 Schalten Sie den Strom für 15 Sekunden aus;
- 4 Schalten Sie den Strom an. Danach leuchtet die LED dauerhaft ROT und die Motorwelle öffnet sich vollständig, um anzusehen, dass Sie in den „Werksrest Modus“ gehen.
- 5 Wenn die Motorwelle vollständig geöffnet ist, blinkt die LED ROT, um anzusehen, dass der „Werksreset“ abgeschlossen ist.
- 6 Um den normalen Betrieb abzuschließen, schalten Sie das Gerät für 15 Sekunden aus und dann wieder ein. Die LED wird erneut GRÜN/ROT, um die Firmware-Version anzuzeigen.

